



## INSTRUCTION MANUAL

Congratulations on the purchase of your new outdoor furniture cover! Your Coverini furniture cover is designed to preserve the magnificence of your outdoor furniture investment.

### APPROPRIATE CARE FOR YOUR COVER

The longevity and radiance of your furniture cover directly depends on the way you use and care for it. Even the most resilient materials require a bit of service and care, and outdoor furniture covers are no exception. Following these tips will preserve the life of your cover. Be careful not to pull or stretch your cover across any abrasive surfaces, such as cement, or over sharp corners when installing or removing. Large covers may be best installed and removed by two people. When properly fitted, your cover is designed to prevent water from accumulating and pooling. If the cover is not appropriately fitted and secured, standing water may amass which can inundate and weaken the fabric.

### CLEANING AND STORING YOUR COVER

For best results, your cover should be hand washed or hosed off with cold water and hang dried. You may also launder in a front loading washing machine and hang dry. Do not place cover in dryer or dry clean, as heat and outside chemicals can break down the fabric. You may spot clean with a soft cloth and a mild detergent. Do not use abrasive cleaners or scrubbers. It is important to keep your cover clean for best protection against mold and mildew. Your cover is made from material that will not encourage the development of mold or mildew; however, mold and mildew can grow on accumulated dirt and environmental elements that collect on the cover. Always store your cover dry. Folding and storing a wet cover will promote mildew growth that will deteriorate the fabric.

### WARRANTY

We stand 100% behind our products. If for any reason you are not satisfied with our covers, we will make sure to address, inform, and remedy the issue in a timely manner. Our premium outdoor furniture covers are warranted to be free of defects from workmanship and materials for a period of 3 years. Warranty begins from the

date of original purchase and must be accompanied with the original receipt. The warranty protects your furniture cover against damage when used under normal conditions and does not cover damage from acts of god, pets, vandalism, neglect, misuse, or scarring from heaters or fire pits. Damage caused by heavy storms or high winds will not be covered under warranty. Warranty is void if the cover has been altered, has missing parts, or been modified in any way. We shall not be liable for any damages over the cover's original purchase price. Retain this instruction manual with your receipt for your records.